



# Parts Included

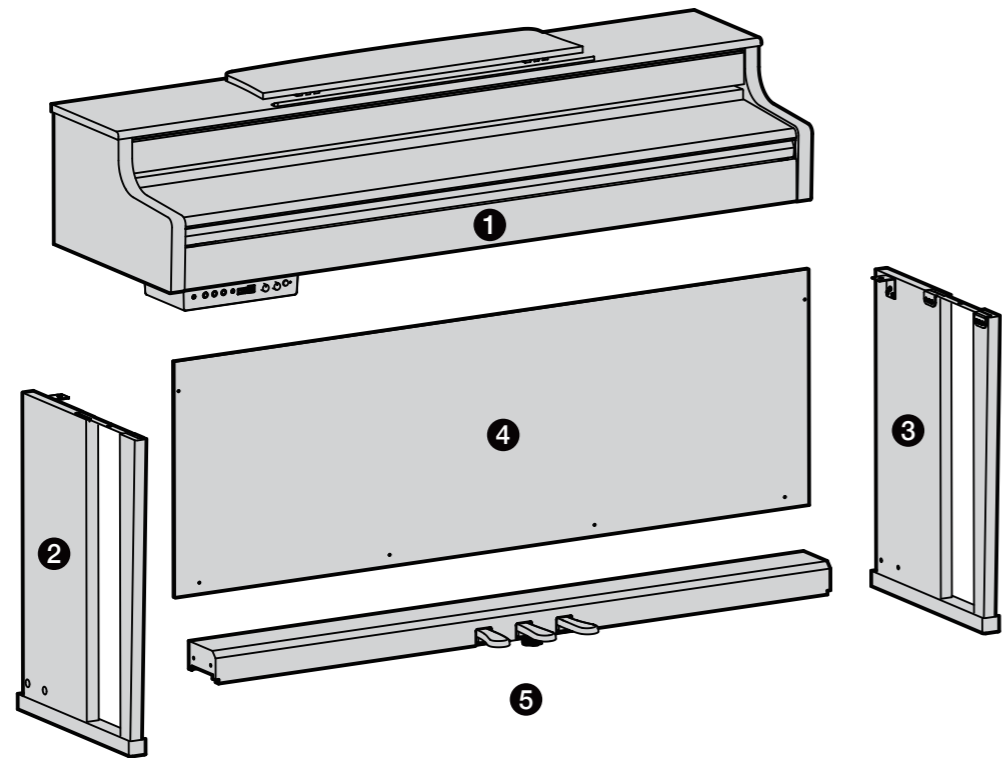

## UPRIGHT PIANO ASSEMBLY GUIDE

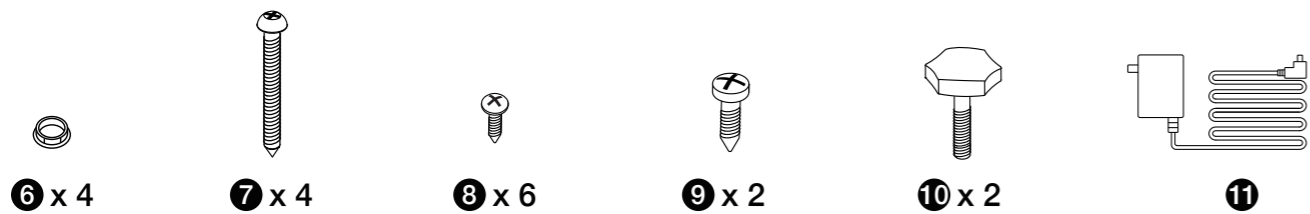


- |               |                                     |                                    |
|---------------|-------------------------------------|------------------------------------|
| 1. Main body  | 5. Pedal box                        | 9. Tapping screw (long, 6 x 30 mm) |
| 2. Left leg   | 6. Screw cap                        | 10. Thumb screw                    |
| 3. Right leg  | 7. Pan head screw (6 x 50 mm)       | 11. Power adapter                  |
| 4. Back plate | 8. Tapping screw (short, 4 x 18 mm) |                                    |

*Please ensure that all listed parts are included in the package!*






- Before taking out the main body from the packaging, please ensure there is enough space around for the assembly.
- Assemble the instrument on a flat and solid surface.
- Prepare a suitable screwdriver before proceeding with the assembly.
- Due to its weight, at least two adults are required to move the main body.
- When lifting the main body, use both hands to securely grasp the bottom of the unit. Please be careful to prevent potential injury or damage to the instrument that may result from improper handling.

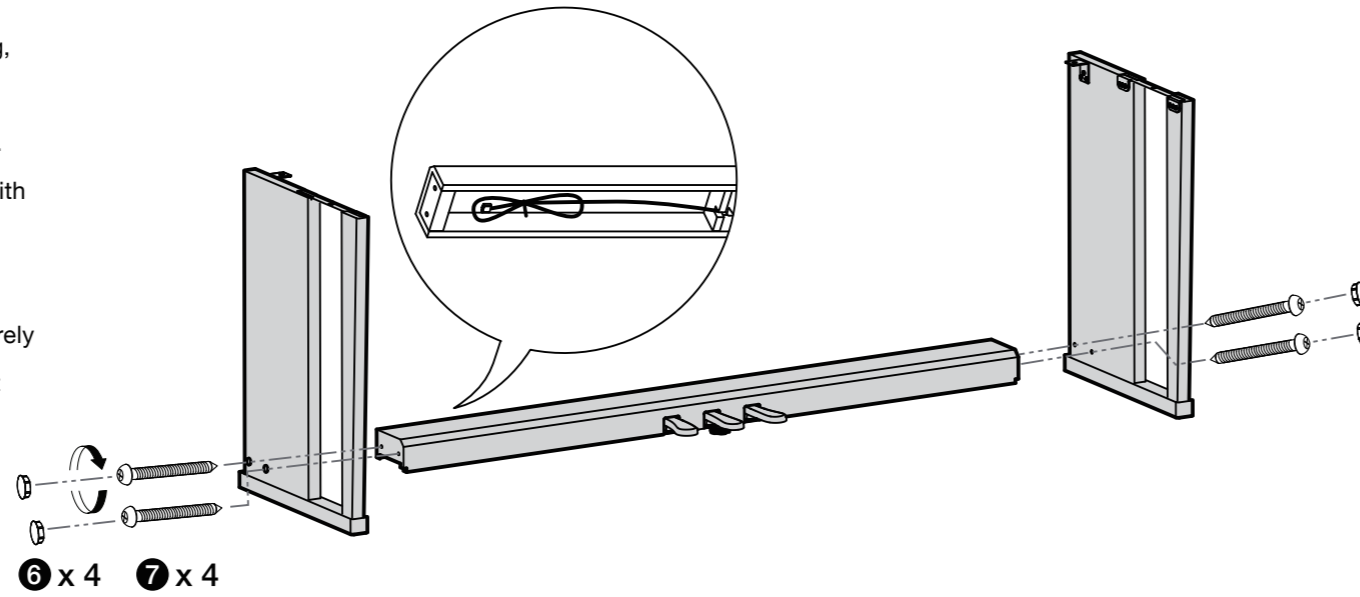


Before installing the pedal box, gently take out the pedal cord from inside the box without straining the fixed end. Attach the pedal box to the legs and fasten the screws **7**, then cover them with the screw caps **6**.

1

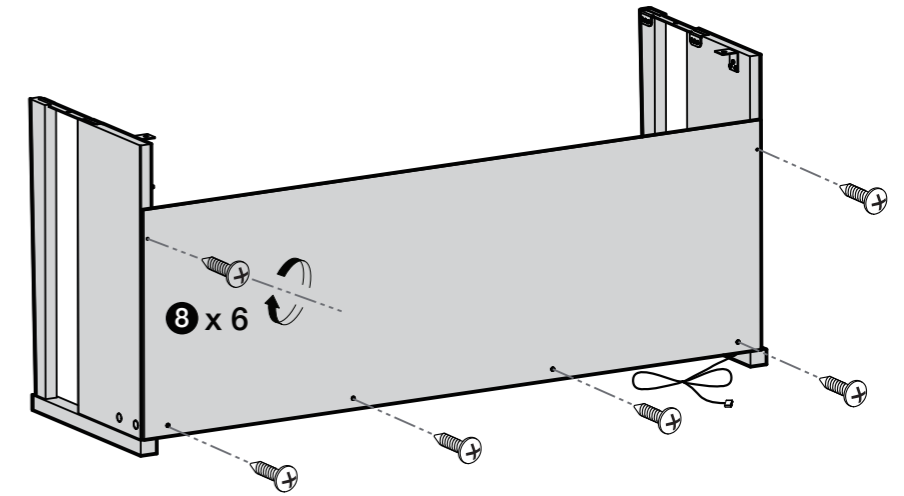


Install the six short tapping screws **8**. Start with the upper two on the legs, then proceed to the four at the bottom.

2

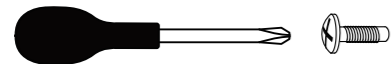


A Phillips screwdriver is required to assemble this instrument

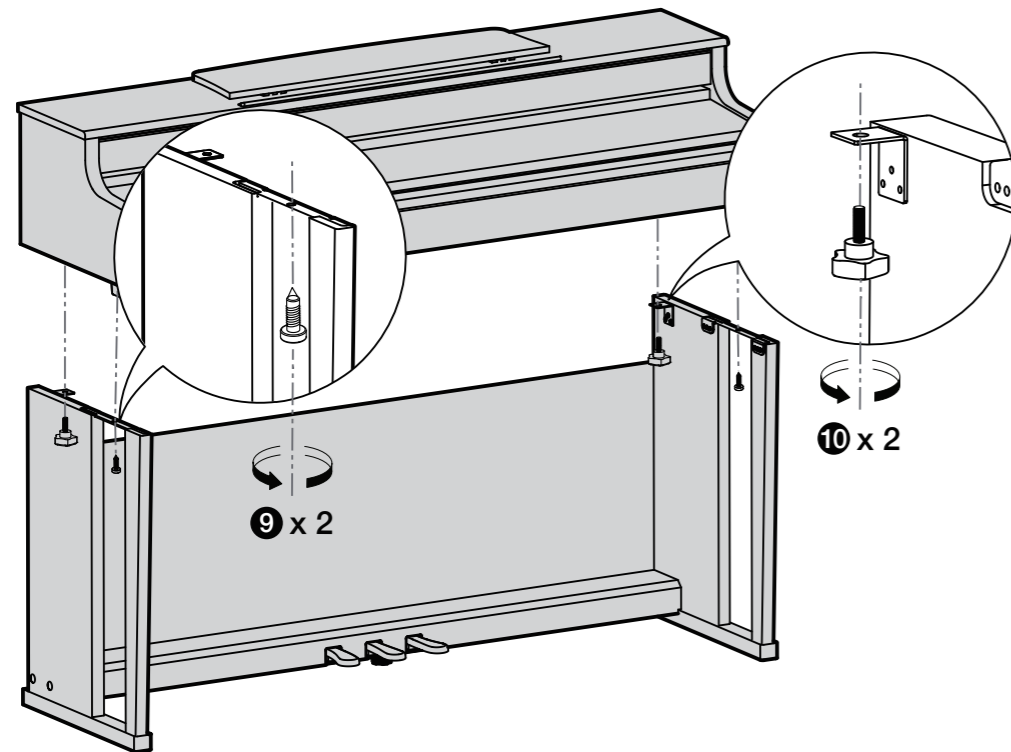


Please first install the two thumb screws **10**, then install the four long tapping screws **9**.

3

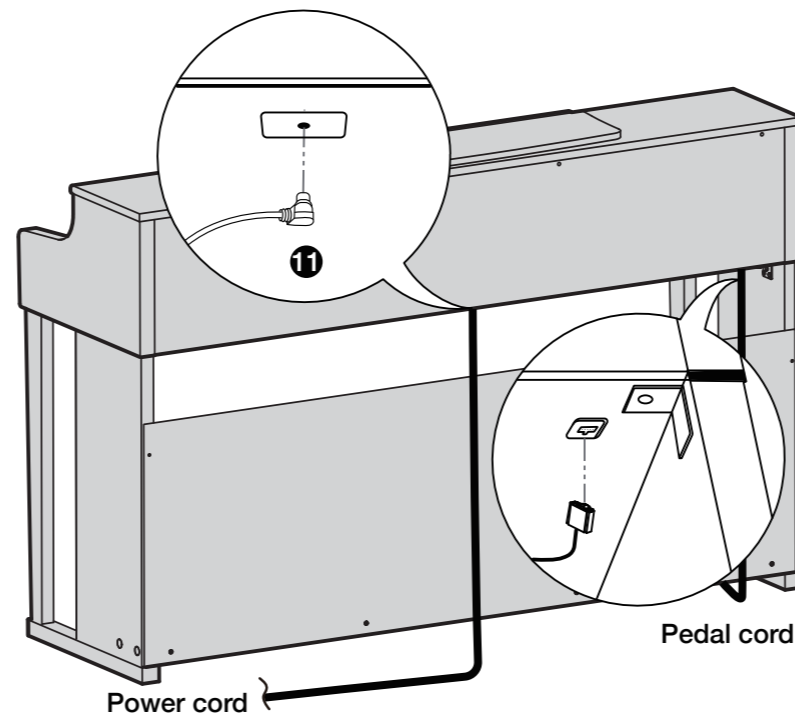

Connect the pedal cord before connecting the power adapter.

4

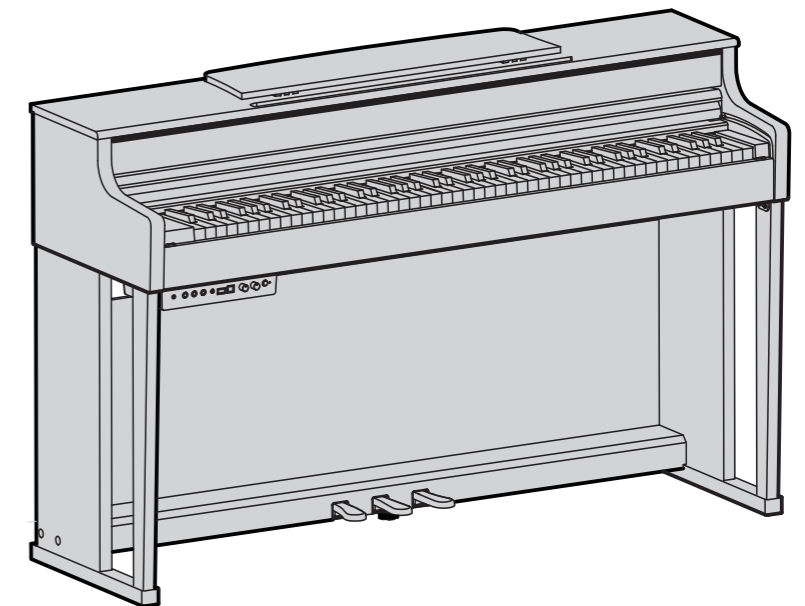

5