



TARBOC RH-T3000WM

Water spray machine instruction



For your safety, please read the instructions carefully before using this machine!

Note:

1. keep the machine away from rain, moisture and liquids.
2. each participant in installation, operation and maintenance of the equipment should be qualified and follow the instructions of this manual.
3. carefully use this product to prevent the high voltage electric shock.
4. before the first use of this equipment, please make sure that no damage in transit. If you have any question, please consult your



TARBOC RH-T3000WM

dealer and do not use equipment on their own.

5.to keep equipment in good working condition, ensure the safe operation.

The fuselage show as follows:





TARBOC RH-T3000WM

Liquid crystal display (LCD) explain

MENU ----- MENU, press the UP and DOWN can set 1-900 seconds.

UP ----- smoke volume increase

DOWN -----smoke volume reduction

The TIMER ----- timing Settings

LOCK ----- don't change Settings, click this button you can spray smoke, can press the UP and DOWN buttons.

MANUAL ----- point injection, namely, MANUAL control, until you reach you want to smoke.


Volume out ----- out of the smoke 0-100%

Duration set ----- last time

The Interval set ----- time Interval

Operation is as follows:

1. Open the air box, open the back cover, and then into the atomizer water tank with water, add water height should be that a piece of plate and tank level and lowest water level is not lower than the probe on the atomizer height. Cover the tank, as shown in the figure below:

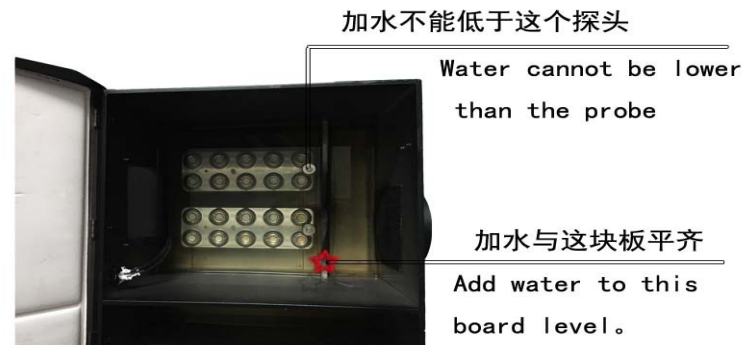

2. Open the white oil pot, the smoke oil in oil pot.



TARBOC RH-T3000WM

3. Plug in the power supply, electronic display shows Warming up, says the preheating.

4. About 3 to 5 minutes later, such as heating, display the Welcome to ready, you can press rock, smoke spewed out. At this point you can press the up and down keys to adjust the smoke quantity size.

5. You need to set up other parameters, enter the menu, and then press the up and down change the numerical size, press menu button save again. Or wait for a few seconds automatically saved after return to smoke volume percentage of the page.

6. If you want to use the remote control, first on the electronic screen set the volume of your smoke, smoke control commonly 20% below is water mist, 30% smoke effect is better. In the press the lock key stop blowing smoke and then press the remote control,

can be out of the smoke.

7. If you need to connect control table, the default channel 001, you can also enter the menu Settings.

8. Pay attention to about 30 minutes later, remember to water tank and water, the specific time according to the amount of smoke you consume water. To prevent the water level can not reach, affect the atomization effect.

9. After using, turn off the power supply. Turn on the tap water tank water to come out. Tidy up, the packing is good work.

Note:

the amount of water mist smoke machine under 20%, only consume water mist, water mist floating, unless there is a wind.

Began to use smoke oil by more than 20%, the thick white smoke,



TARBOC RH-T3000WM

such as a slight on bleaching, could be the wind environment around there are obstacles or site. This time can be appropriately the small amount of smoke to reduce smoke, increase water mist to achieve the effect you want.