


Mikado MK-1280

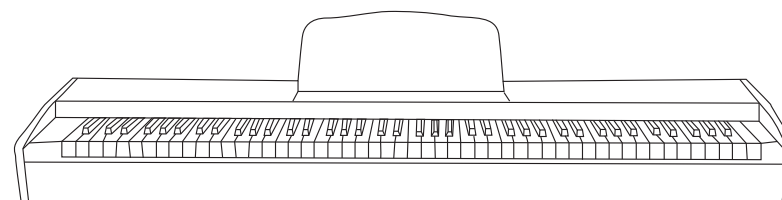

Содержание


| | |
|-------------------------|-------|
| 1. Введение | 1 |
| 2. Панель управления | 2 |
| 3. Описание частей | 3 |
| 4. Источник питания | 4 |
| 5. Подключение | 5-6 |
| 6. Авто аккомпанемент | 7-8 |
| 7. Настройки | 9-10 |
| 8. Тон | 11-16 |
| 9. Ритм | 17-20 |
| 10. Демо песни | 21 |
| 11. Расписание аккордов | 22 |
| 12. Приложение 1 | 23-24 |
| 13. Приложение 2 | 25 |



Введение

Клавиатура: 88 стандартных клавиш (включая черные клавиши). Диапазон: A1~C9.

- Тембр: 880 тембров (1-880).
- Ритм: 600 ритмов (1-600).
- Демо: 80 треков (1-80)
- Функция записи и воспроизведения, функция ритма, функция демонстрации, функция метронома, функция барабана клавиатуры.
- Выходная функция: трехразрядный цифровой дисплей.
- Демпферная педаль, демпферная педаль, педаль задержки Регулятор тембра: сила, шифт+, шифт - Педальное управление: 3 педали

Воспроизведение аудиофайлов MP3 с USB-накопителя
Отверстие для подключения USB делает подключение более простым и удобным
Функция записи: запись, воспроизведение, можно удобно записать в трек аккомпанемент- трек мелодии.
Встроенные стереодинамики обеспечивают высокое качество звуковых эффектов.
Аудиовход/аудиовыход Наушники: внешний двойной разъем для наушников. Другие функции: USB-воспроизведение, пауза, последняя песня

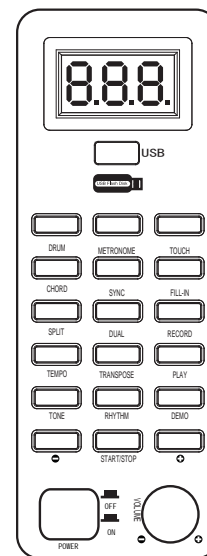


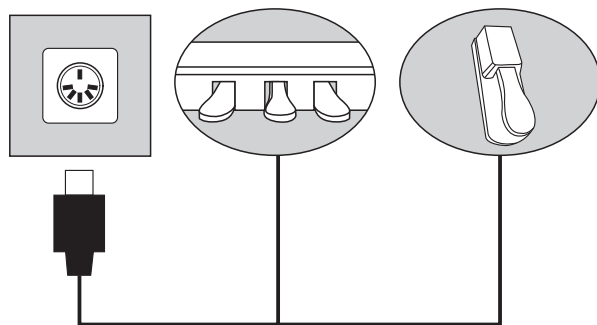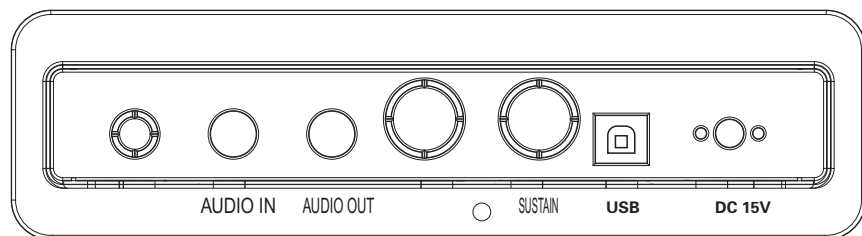

Питание

Этот продукт может питаться от стандартной внутренней настенной розетки, обязательно выключайте питание, когда оно не используется.

Используйте трансформатор переменного тока. Пожалуйста, используйте только трансформаторы переменного тока, указанные в этом издании.

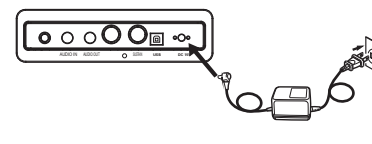

ПРЕДУПРЕЖДЕНИЕ Розетка переменного тока. Неправильное использование трансформатора переменного тока может привести к возгоранию. Опасность и риск поражения электрическим током. Необходимо учитывать следующие соображения: специальная поставка, указанная для этого продукта, должен использоваться трансформатор тока. выходное напряжение должно использоваться в маркировке асВ пределах номинального диапазона напряжения на электрическом трансформаторном блоке питания переменного тока. может перегрузить розетку и удлинитель питания. не кладите тяжелые предметы на шнур питания и не нагревайте его. не пытайтесь модифицировать шнур питания или переусердствовать. Изгиб. не скручивайте и не тяните шнур питания. если шнур питания или вилка повреждены, замените их

Шнур питания и вилка одного и того же типа. не прикасайтесь к трансформатору переменного тока мокрыми руками. В противном случае существует риск поражения электрическим током. пожалуйста, используйте связь в месте, которое не будет разб



⚠ WARNING

Использование поврежденного блока питания вызывает опасность пожара и риск поражения электрическим током. Необходимо соблюдать следующие примечания. не кладите шнур питания рядом с плитой или любым другим источником тепла рядом.


Подключение

Аудиовходы

Перед подключением внешнего устройства к продукту обязательно сначала уменьшите громкость источника звука. После завершения подключения громкость можно сбросить обратно до уровня удовлетворения.

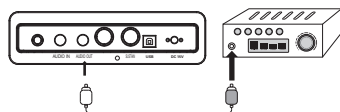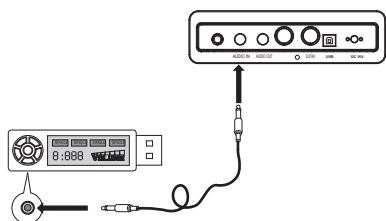

⚠ При подключении внешних звуковых устройств используйте низкие настройки выходных сигналов

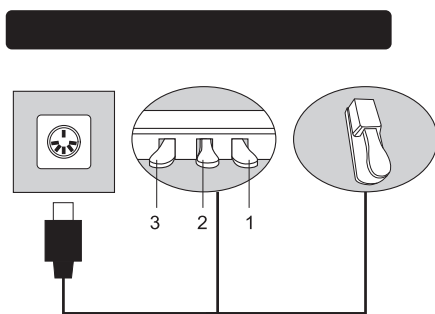

1. Демпферная педаль: после нажатия на демпферную педаль нажатие клавиш производит эффект удлинения. Педаль тона с задержкой: нажмите педаль тона с задержкой. После этого будет только сустейн воспроизводимой ноты. Мягкая педаль: после нажатия педали отключения звука можно уменьшить текущую громкость воспроизведения, вернуться к нормальному состоянию после отпущания.

5



Примечание: стандартный разъем, подключенный к цифровому пианино, должна быть использован стерео разъем


Аудиовыходы

Before you connect the audio amplifier, be sure, first, turn down the volume on the digital piano. The connection to complete and then the volume can be returned to their satisfaction.

The connection

USB-интерфейс


С помощью USB-порта этого цифрового пианино можно подключить к музыкальному устройству с USB-подключением к компьютеру. Предварительно установив музыкальное программное обеспечение на свой компьютер, чтобы играть, сочинять, редактировать, хранить и выполнять другие функциональные операции. Редактировать музыку и озвучивать музыку Встроенное программное обеспечение аккомпанемент, может быть подключен через программное обеспечение к цифровому фортепиано для игры, или в зависимости от звука аккомпанемента музыка воспроизводится.

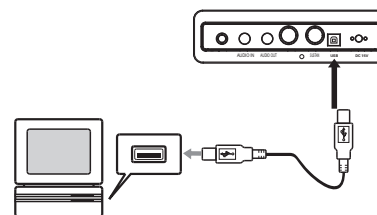

Используйте универсальные USB-кабели, подключите цифровое пианино к компьютеру и включите его. оборудование для цифрового пианино, пожалуйста, установите его в качестве устройства по умолчанию.

Разъем наушников

Этот продукт имеет два выходных порта для наушников, подключенных. Обязательно выключите цифровую сталь, прежде чем подключать наушники. Громкость пианино. Громкость можно изменить после завершения подключения. Верните свой уровень удовлетворения.

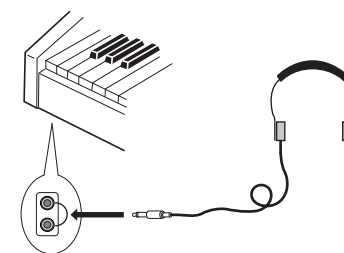

Подключение наушников Подключение наушников автоматически отключит цифровое пианино. Встроенный выход для динамика позволяет играть поздно ночью, не мешая другим.

6

Основные функции

Подготовка

Этот раздел знакомит вас с основными функциями цифрового пианино.

Переключите переключатель «питание» в начальное состояние, экран дисплея загорится и перейдет в нормальный игровой режим.

Отрегулируйте ручку громкости, чтобы правильно отрегулировать громкость, когда положение Воспроизведение музыки на клавиатуре

Выбор тембра

Этот продукт имеет 800 видов встроенного тембра (сканируйте только два кода), Пожалуйста, следуйте инструкциям ниже, чтобы выбрать нужный тон.

Найдите нужный вам тембр в тембрелисте и запишите его тембровый номер. Нажмите клавишу тембра, чтобы войти в режим тембра. Выберите то, что вы хотите, нажав клавишу «+», «-». Тембр по тону, номер тембра (0-799)

Автоматический аккомпанемент

Выбор ритма.

В этот продукт встроено 600 ритмов (см. список ритмов), следуйте приведенным ниже шагам, чтобы выбрать нужный ритм.

Нажмите клавишу ритма, чтобы войти в режим ритма.

Выберите нужную клавишу, выбрав клавишу «+» «_». Ритм, номер стиля (0-599)

Нажмите «старт/стоп», чтобы запустить ритм воспроизведения.

Чтобы остановить ритм, снова нажмите кнопку «старт/». Подойдет кнопка «стоп».

Регулировка скорости

270 секций управления скоростью (30-300) предустановленное значение включения питания находится в пункте 90

Нажмите клавишу скорости, чтобы войти в режим регулировки скорости. Выберите нужную скорость, нажав кнопку «+» «-»

● Автоматический аккомпанемент

Использование аккордового аккомпанемента

Как вы используете эту функцию. Прежде чем начать, вы должны сначала выбрать темп для использования и установить значение скорости.

Нажмите кнопку «старт/стоп», чтобы начать. Установите ритм.

Нажмите кнопку «комплексный аккорд», чтобы войти в состояние аккорда. использование простых аккордовых паттернов, где проигрывается сложный аккорд, а затем этот инструмент реагирует на аккорды.

Играя аккорды нажмите на аккомпанементной клавиатуре(клавиши 1-22 слева) разные аппликатуры играются по-разному. Нажмите кнопку «автоаккорд» еще раз, чтобы выключить функцию



Одновременное начало

Вы можете настроить этот продукт так, чтобы когда вы находитесь на клавиатуре, воспроизведение ритма началось в то же время, что и аккомпанемент. Следующие шаги описывают, как использовать функцию синхронного запуска. значение и выберите Аккорды для аккомпанемента

1. В состоянии аккорда нажмите кнопку «синхронизация», чтобы он перешел в состояние ожидания синхронного запуска.
2. Сыграйте аккорды, и аккомпанемент начнет играть автоматически.
3. Чтобы отменить синхронизацию, нажмите кнопку «Пуск/Стоп».

Использование музыкальной библиотеки

Встроенная музыкальная библиотека этого продукта содержит 80 музыкальных композиций (см. список демо-песен) с музыкой. Музыка предназначена для воспроизведения и наслаждения.

1. Найдите музыку для воспроизведения в списке библиотеки. Запишите номер.
2. Нажмите кнопку «Demo Song», чтобы ввести тип демонстрационной песни.
3. Выберите песню, выбрав клавишу «+» «-» Серийный номер (0-79)
4. Нажмите еще раз кнопку демонстрации или кнопку start/stop, чтобы остановить воспроизведение и выйти из режима. Музыка будет продолжать воспроизводиться последовательно, пока вы ее не остановите.

Настройка

Клавиатура этого инструмента является динамической и тактильной клавиатурой с функцией чувствительности к силе нажатия. Громкость звуков зависит от силы вашего нажатия, что позволяет расставлять акценты в произведениях во время игры.

Нажмите кнопку «Force», чтобы запустить функцию Force Touch.

Нажмите «force» еще раз, чтобы отключить функцию.

Использование перкуSSIONных функций клавиатуры
Нажмите кнопку «перкуссия», чтобы переключить клавиатуру цифрового фортепиано на клавиатуру ударных, повторное нажатие отключит функцию.

Использование функции двойного тембра
При использовании функции двойного тембра для игры на клавиатуре можно одновременно использовать два разных тембра, представленных двумя инструментами.

1. Сначала войдите в режим тона и выберите музыкальный инструмент. В качестве основного цвета тона используется инструмент.
2. Нажмите кнопку «двойной тон», чтобы ввести второй тон, чтобы выбрать режим.
3. Используйте кнопку «Колесо данных», чтобы выбрать второй тембр инструмента.

Использование функции сегментации клавиатуры
С помощью функции сегментации можно разделить клавиатуру на два различных по тембру (основной и разделенный тембр) части, таким образом вы можете играть левой рукой один тон, а правой рукой играть дополнительный тон.

1. Сначала войдите в режим тона и выберите музыкальный инструмент, который будет использоваться в качестве основного тона.
2. Нажмите кнопку «сегментация клавиатуры» еще раз, чтобы войти в режим выбора добавочного тона.
3. Используйте кнопку выбора номера или колесо данных, чтобы выбрать инструмент, используемый в качестве дополнительного тона
4. Попробуйте сыграть ноты на клавиатуре.
5. Нажмите кнопку «Сегментация клавиатуры» еще раз, чтобы отменить разделение клавиатуры и вернуться в нормальное состояние клавиатуры.



Важно!

Клавиатуру можно разделить с помощью меню «Functions». Выберите параметр «Keyboardsegmentation point», а затем выберите «Колесоданных» или кнопку «+» в цифровой области. Выберите точку раздела.

Использование функций метронома

Нажмите кнопку «метроном», функция метронома включите, и вы можете играть со звуком ритма. Нажмите «бит», функция метронома отключена. Пожалуйста, используйте кнопку «Скорость ритма», чтобы установить скорость.

Настройка

Запись

1. Нажмите кнопку «record», чтобы войти в режим записи.
2. Максимальное количество записей - 250.
3. Если память заполнена самая старая запись удаляется при начале новой записи.

Воспроизведение

Нажмите кнопку «play», чтобы воспроизвести записанное ранее произведение.

Управление тоном

1. Нажмите клавишу «Shift», чтобы войти в режим управления сдвигом.
2. Нажмите клавишу «+» «-» еще раз, чтобы установить диапазон смещения. Есть 13 разделов (-6-+6) для управления передачей, а значение по умолчанию для включения указано в пункте 7.
3. Удерживайте нажатой клавишу «+» «-» в течение одной секунды

Функция MP3

1. Прямой вход в режим mp3 после подключения к usbFlash диску.
2. Нажмите кнопку включения mp3, чтобы включить или выключить проигрыватель MP3.
3. Выбрать файл mp3: нажмите «+» и «-», чтобы выбрать песню.
4. Нажмите кнопку запуска/остановки, чтобы начать или приостановить воспроизведение.

Bluetooth :


Bluetooth

Bluetooth.


MK-1250.

Mikado RS


Руководство по установке

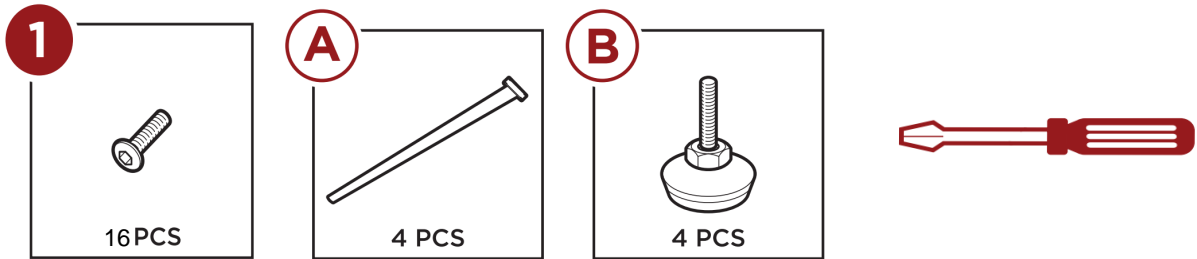


1. Прикрутите основание ножки (B) к нижней части ножки (A). Повторите процедуру для сборки оставшихся ножек.

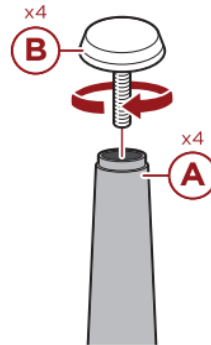

2. Найдите предварительно просверленные отверстия в нижней стенке (см. иллюстрацию ниже), затем закрепите ножку (A) с помощью четырех винтов (деталь 1), убедившись, что основание ножки выровнено относительно поверхности нижней стенки. Повторите, чтобы прикрепить все ножки.

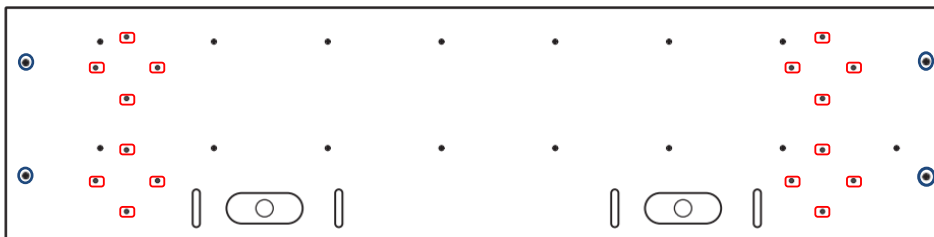

Примечание: Красные отверстия для ножек RS синие для ножек WS

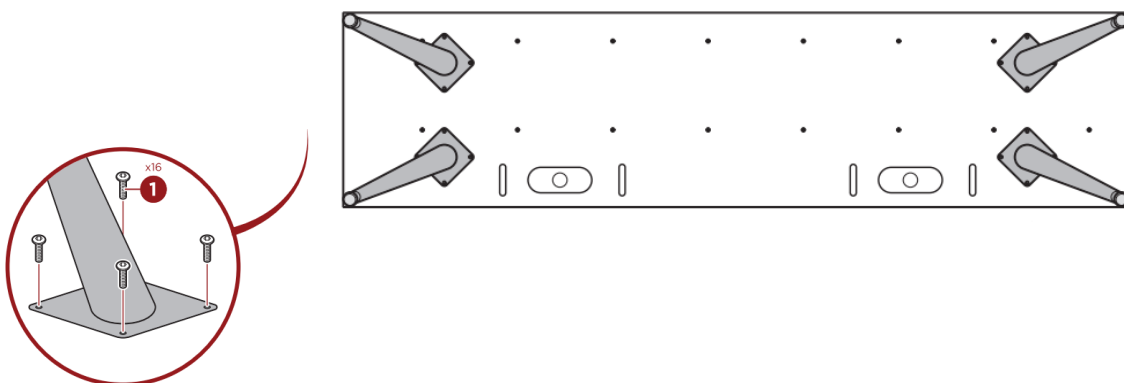

3. Переверните собранный инструмент, затем отрегулируйте ножки по мере необходимости, пока пианино он не встанет ровно.

СПИСОК ТОНОВ:

| | | |
|------------------------------|-----------------------------|--------------------------------|
| T001 Acoustic Grand Piano | T053 Choir Aahs | T105 Sitar |
| T002 Bright Acoustic Piano | T054 Voice Oohs | T106 Banjo |
| T003 Electric Grand Piano | T055 Synth Voice | T107 Shamisen |
| T004 Honky-tonk Piano | T056 Orchestra Hit | T108 Koto |
| T005 Rhodes Piano | T057 Trumpet | T109 Kalimba |
| T006 Chorused Piano | T058 Trombone | T110 Bagpipe |
| T007 Harpsichord | T059 Tuba | T111 Fiddle |
| T008 Clavichord | T060 Muted Trumpet | T112 Shanai |
| T009 Celesta | T061 French Horn | T113 Tinkle Bell |
| T010 Glockenspiel | T062 Brass Section | T114 Agogo |
| T011 Music box | T063 Synth Brass 1 | T115 Steel Drums |
| T012 Vibraphone | T064 Synth Brass 2 | T116 Woodblock |
| T013 Marimba | T065 Soprano Sax | T117 Taiko Drum |
| T014 Xylophone | T066 Alto Sax | T118 Melodic Tom |
| T015 Tubular Bell | T067 Tenor Sax | T119 Synth Drum |
| T016 Dulcimer | T068 Baritone Sax | T120 Reverse Cymbal |
| T017 Drawbar Organ | T069 Oboe | T121 Guitar Fret Noise |
| T018 Percussive Organ | T070 English Horn | T122 Breath Noise |
| T019 Rock Organ | T071 Bassoon | T123 Seashore |
| T020 Church Organ | T072 Clarinet | T124 Bird Tweet |
| T021 Reed Organ | T073 Piccolo | T125 Telephone Ring |
| T022 Accordion | T074 Flute | T126 Helicopter |
| T023 Harmonica | T075 Recorder | T127 Applause |
| T024 Tango Accordion | T076 Pan Flute | T128 Gunshot |
| T025 Acoustic Guitar (nylon) | T077 Bottle Blow | T129 Yong Gin |
| T026 Acoustic Guitar (steel) | T078 Shakuhachi | T130 Zheng |
| T027 Electric Guitar (jazz) | T079 Whistle | T131 Zhong Ruan |
| T028 Electric Guitar (clean) | T080 Ocarina | T132 Pi Pa |
| T029 Electric Guitar (muted) | T081 Lead 1 (square) | T133 Big Souna |
| T030 Overdriven Guitar | T082 Lead 2 (sawtooth) | T134 Souna |
| T031 Distortion Guitar | T083 Lead 3 (calliope lead) | T135 Er Hu |
| T032 Guitar Harmonics | T084 Lead 4 (chiff lead) | T136 Yue Hu |
| T033 Acoustic Bass | T085 Lead 5 (charang) | T137 Di Zi |
| T034 Electric Bass(finger) | T086 Lead 6 (voice) | T138 Bong Di |
| T035 Electric Bass (pick) | T087 Lead 7 (fifths) | T139 Koto |
| T036 Fretless Bass | T088 Lead 8 (bass+lead) | T140 Qu Di |
| T037 Slap Bass 1 | T089 Pad 1 (new age) | T141 Jungle Bass |
| T038 Slap Bass 2 | T090 Pad 2 (warm) | T142 Koto 2 |
| T039 Synth Bass 1 | T091 Pad 3 (polysynth) | T143 Marimba 3 |
| T040 Synth Bass 2 | T092 Pad 4 (choir) | T144 Tsugaru |
| T041 Violin | T093 Pad 5 (bowed) | T145 Kawala 1 |
| T042 Viola | T094 Pad 6 (metallic) | T146 Attack Clav. 1 |
| T043 Cello | T095 Pad 7 (halo) | T147 Crystal |
| T044 Contrabass | T096 Pad 8 (sweep) | T148 Bright String |
| T045 Tremolo Strings | T097 FX 1 (rain) | T149 Clavi 2 |
| T046 Pizzicato Strings | T098 FX 2 (soundtrack) | T150 Chorus Guitar. |
| T047 Orchestral Harp | T099 FX 3 (crystal) | T151 Barafon |
| T048 Timpani | T100 FX 4 (atmosphere) | T152 Jazz Organ |
| T049 String Ensemble 1 | T101 FX 5 (brightness) | T153 Indian Flute |
| T050 String Ensemble 2 | T102 FX 6 (goblins) | T154 Mute Barafon 1 |
| T051 Synth Strings 1 | T103 FX 7 (echoes) | T155 Dual Horns 1 |
| T052 Synth Strings 2 | T104 FX 8 (sci-fi) | T156 Electric Guitar (Clean) 2 |

| | | |
|----------------------------|----------------------------|----------------------------|
| T157 Clavi 3 | T209 Mute Barafon 3 | T261 Soft Guitar 5 |
| T158 Soft Sax 1 | T210 Dual Horns 2 | T262 Nay 3 |
| T159 Electric Vibraphone | T211 Xylophone 2 | T263 Synth Harpsi. 3 |
| T160 Didgeridoo 1 | T212 Didgeridoo 3 | T264 Wind Organ 3 |
| T161 Barafon 2 | T213 Wind Organ 2 | T265 Shanai 2 |
| T162 Tubular Bells 2 | T214 Church Bells | T266 Woodblock 6 |
| T163 Soft Accord | T215 Tsugaru 3 | T267 Electric Vibraphone 4 |
| T164 Barafon 3 | T216 Nay | T268 Kawala 5 |
| T165 Clavi 4 | T217 Guitar Pinch 2 | T269 Grow Guitar 2 |
| T166 Nay | T218 Grow Guitar | T270 Grow Guitar 3 |
| T167 Oct Harp | T219 Indian Flute 3 | T271 Steel Bell 6 |
| T168 Attack Barafon | T220 Synth Harpsi. 2 | T272 Wind Organ 4 |
| T169 Clavi 5 | T221 Soft Sax 2 | T273 Soft Accord 2 |
| T170 Kalimba 2 | T222 Xylophone 3 | T274 Kalimba 3 |
| T171 Tsugaru 2 | T223 English Horn 2 | T275 Twin Bones 3 |
| T172 Shamisen 2 | T224 Soft Guitar 3 | T276 Church Bells 2 |
| T173 Woodblock 2 | T225 Castanets 2 | T277 Koto 5 |
| T174 Crystal 2 | T226 Soft Guitar 4 | T278 Attack Barafon 2 |
| T175 Shamisen 3. | T227 Hard Vibe 2 | T279 Mute Barafon 5 |
| T176 Synth Harpsi. 1 | T228 Reed Horn | T280 Nay 4 |
| T177 Jazz Organ 1 | T229 Nay 2 | T281 Jungle Bass 2 |
| T178 Viola Attack | T230 Bari & Tenor | T282 Soft Accord 3 |
| T179 Viola Attack 2 | T231 Kawala 3 | T283 Hard Vibe 3 |
| T180 Hard Barsoon 1 | T232 Indian Flute 4 | T284 Soft Pipe. |
| T181 Mute Barafon 2 | T233 Didgeridoo 4 | T285 Bag Clav. 2 |
| T182 Bodhran | T234 Attack Clav. 2 | T286 Oct Harp 2 |
| T183 Kawala 2 | T235 Marimba 4 | T287 Woodblock 7 |
| T184 Didgeridoo 2 | T236 Bari & Tenor 2 | T288 Mute Barafon 6 |
| T185 Soft Guitar 1 | T237 Slow Violin | T289 Guitar Pinch 4 |
| T186 Souna | T238 Organ Flute | T290 Dulcimer 3 |
| T187 Twin Bones | T239 Jazz Organ 4 | T291 Soft Sax 4 |
| T188 Jazz Organ 2 | T240 Electric Vibraphone 3 | T292 Electric Vibraphone 5 |
| T189 Woodblock 3 | T241 Dual Horns 3 | T293 Tsugaru 6 |
| T190 Soft Santur | T242 Indian Flute 5 | T294 Reed Horn 2 |
| T191 Koto 3 | T243 English Horn 3 | T295 Castanets 3 |
| T192 Castanets 1 | T244 Dulcimer 2 | T296 Tron Flute 2 |
| T193 Viola Attack 3 | T245 Koto 4 | T297 Attack Clav. 3 |
| T194 Woodblock 4 | T246 Tubular Bells 3 | T298 Bari & Tenor 3 |
| T195 Bright String 2 | T247 Tsugaru 4 | T299 Indian Flute 6 |
| T196 Twin Bones 2 | T248 Tsugaru 5 | T300 Soft Guitar 6 |
| T197 Tenor Sax 2 | T249 Mute Barafon 4 | T301 Nay 5 |
| T198 Wind Organ | T250 Dual Horns 4 | T302 Didgeridoo 5 |
| T199 Tron Flute | T251 Soft Sax 3 | T303 Marimba 5 |
| T200 Bodhran 2 | T252 Bodhran 3 | T304 Attack Clav. 4 |
| T201 Tron Flute | T253 Guitar Pinch 3 | T305 Jungle Bass 3 |
| T202 Jazz Organ 3 | T254 Crystal 3 | T306 Hard Barsoon 2 |
| T203 Soft Santur 2 | T255 Grow Guitar | T307 Souna 2 |
| T204 Woodblock 5 | T256 Jazz Organ 5 | T308 Hard Vibe 4 |
| T205 Shamisen 4 | T257 Attack Barafon | T309 Bag Pipe 3 |
| T206 Indian Flute 2 | T258 Xylophone 4 | T310 Soft Accord 4 |
| T207 Electric Vibraphone 2 | T259 Soft Santur 3 | T311 Attack Barafon 3 |
| T208 Soft Guitar 2 | T260 Kawala 4 | T312 Hard Barsoon 3 |

T313 Dulcimer 4
 T314 Twin Bones 4
 T315 Soft Sax 5
 T316 Shamisen 5
 T317 Suona 3
 T318 Bodhran 4
 T319 Shamisen 6
 T320 Electric Vraphone 6
 T321 Tsugaru 7
 T322 Oct Harp 3
 T323 Kalimba 4
 T324 Soft Clav. 2
 T325 English Horn 3
 T326 Didgeridoo 6
 T327 Barafon 4
 T328 Indian Flute 7
 T329 Organ Flute 2
 T330 Soft Santur 4
 T331 Mute Barafon 7
 T332 Nay 6
 T333 Hard Vibe 5
 T334 Bari & Tenor 4
 T335 Bag Pipe 4
 T336 Tenor Sax 3
 T337 Organ Flute 3
 T338 Dulcimer 5
 T339 Twin Bones 5
 T340 Grow Guitar 4
 T341 Kalimba 5
 T342 Oct Harp 4
 T343 Nay 7
 T344 Dual Horns 5
 T345 Didgeridoo 7
 T346 English Horn 4
 T347 Kawala 6
 T348 Marimba 6
 T349 Barafon 5
 T350 Soft Accord 5
 T351 Mute Barafon 8
 T352 Dual Horns 6
 T353 Church Bells 3
 T354 Wind Organ 5
 T355 Attack Clav. 5
 T356 Jazz Organ 6
 T357 Reed Horn 3
 T358 Tenor Sax 4
 T359 Chorus Guitar. 2
 T360 Didgeridoo 8
 T361 Soft Santur 5
 T362 Clavi 6
 T363 Kalimba 6
 T364 Didgeridoo 9

T365 Wind Organ 6
 T366 Tron Flute 3
 T367 Soft Sax 6
 T368 Suona 4
 T369 Soft Guitar 7
 T370 Hard Vibe 6
 T371 Jazz Organ 7
 T372 Grow Guitar 5
 T373 Xylophone 5
 T374 Bag Pipe 5
 T375 Bag Pipe 6
 T376 Clavi 7
 T377 Hard Vibe 7
 T378 Kawala 7
 T379 Shanai 3
 T380 Suona 5
 T381 Jungle Bass 4
 T382 Grow Guitar 6
 T383 Bag Pipe 7
 T384 Crystal 4
 T385 Guitar Pinch 5
 T386 Woodblock 8
 T387 Soft Sax 7
 T388 Attack Barafon 4
 T389 Barafon 6
 T390 Organ Flute 4
 T391 Mute Barafon 9
 T392 Shanai 4
 T393 Soft Clav. 3
 T394 Oct Harp 5
 T395 Tron Flute 4
 T396 Bright String 3
 T397 Jazz Organ 8
 T398 Mute Barafon 10
 T399 Slow Violin 2
 T400 Soft Sax 8
 T401 English Horn 5
 T402 Reed Horn 4
 T403 Indian Flute 8
 T404 Castanets 4
 T405 English Horn 6
 T406 Tron Flute 5
 T407 English Horn 7
 T408 Hard Barsoon 4
 T409 Dulcimer 6
 T410 Xylophone 6
 T411 Mute Barafon 11
 T412 Nay 8
 T413 Mute Barafon 12
 T414 Dual Horns 7
 T415 Kawala 8
 T416 Soft Clav. 4

T417 Hard Barsoon 5
 T418 Dulcimer 7
 T419 Soft Accord 6
 T420 Church Bells 4
 T421 Shamisen 7
 T422 Synth Harpsi. 4
 T423 Crystal 5
 T424 Kawala 9
 T425 Dual Horns 8
 T426 Clavi 8
 T427 Electric Vraphone 7
 T428 Castanets 5
 T429 Tenor Sax 5
 T430 Tenor Sax 6
 T431 Didgeridoo 10
 T432 Kalimba 7
 T433 English Horn 8
 T434 Guitar Pinch 6
 T435 Hard Vibe 8
 T436 Mute Barafon 13
 T437 Tenor Sax 7
 T438 Bag Pipe 8
 T439 Shanai 5
 T440 English Horn 9
 T441 Didgeridoo 11
 T442 Organ Flute 5
 T443 Attack Barafon 5
 T444 Jungle Bass 5
 T445 Barafon 7
 T446 Soft Santur 6
 T447 Slow Violin 3
 T448 Hard Barsoon 6
 T449 Didgeridoo 12
 T450 Kalimba 8
 T451 Electoric Giutar (Clean) 3
 T452 Dulcimer 8
 T453 Reed Horn 5
 T454 Bodhran 5
 T455 Soft Sax 9
 T456 Mute Barafon 14
 T457 Guitar Pinch 7
 T458 Wind Organ 7
 T459 Guitar Pinch 8
 T460 Indian Flute 9
 T461 Bag Pipe 9
 T462 Crystal 6
 T463 Twin Bones 6
 T464 Crystal 7
 T465 Soft Guitar 8
 T466 Guitar Pinch 9
 T467 Attack Clav. 6
 T468 Bodhran 6

T469 Suona 6
 T470 Chorus Guitar. 3
 T471 Slow Violin 4
 T472 Clavi 9
 T473 Castanets 6
 T474 Slow Violin 5
 T475 Jazz Organ 9
 T476 Jazz Organ 10
 T477 Electric Vraphone 8
 T478 Bodhran 7
 T479 Steel Bell 7
 T480 Synth Harpsi. 5
 T481 Marimba 7
 T482 Marimba 8
 T483 Attack Barafon 6
 T484 Castanets 7
 T485 Hard Vibe 9
 T486 Tron Flute 6
 T487 Soft Accord 7
 T488 Shanai 6
 T489 Woodblock 9
 T490 Soft Sax 10
 T491 Slow Violin 6
 T492 Soft Sax 11
 T493 Chorus Guitar. 4
 T494 Attack Clav. 7
 T495 Reed Organ 2
 T496 Viola Attack 4
 T497 Koto 6
 T498 Tsugaru 8
 T499 Bag Pipe 10
 T500 Attack Clav. 8
 T501 Tron Flute 7
 T502 Marimba 9
 T503 Bag Pipe 11
 T504 Hard Barsoon 7
 T505 Mute Barafon 15
 T506 Soft Sax 12
 T507 Attack Clav. 9
 T508 Jazz Organ 11
 T509 Soft Guitar 9
 T510 Didgeridoo 13
 T511 Bright String 4
 T512 Electoric Giutar (Clean)4
 T513 Tsugaru 9
 T514 Nay 9
 T515 Reed Horn 6
 T516 Didgeridoo 14
 T517 Soft Clav. 5
 T518 Soft Sax 13
 T519 Reed Organ 3
 T520 Steel Bell 8

T521 Clavi 10
 T522 Wind Organ 8
 T523 Synth Harpsi. 6
 T524 Bari & Tenor 5
 T525 Steel Bell 9
 T526 Soft Sax 14
 T527 Castanets 8
 T528 Didgeridoo 15
 T529 Soft Sax 15
 T530 Mute Barafon 16
 T531 Soft Guitar 10
 T532 Soft Accord 8
 T533 Wind Organ 9
 T534 Didgeridoo 16
 T535 Electoric Giutar (Clean)5
 T536 English Horn 10
 T537 Soft Sax 16
 T538 Soft Guitar 11
 T539 Hard Barsoon 8
 T540 Kalimba 9
 T541 Koto 7
 T542 Soft Clav. 6
 T543 Xylophone 7
 T544 Soft Clav. 7
 T545 Church Bells 5
 T546 Kawala 10
 T547 Didgeridoo 17
 T548 Kalimba 10
 T549 Castanets 9
 T550 Didgeridoo 18
 T551 Bodhran 8
 T552 English Horn 11
 T553 Hard Vibe 10
 T554 Bodhran 9
 T555 Indian Flute 10
 T556 Dulcimer 9
 T557 Soft Clav. 8
 T558 Viola Attack 5
 T559 Attack Harp 1
 T560 Mute Barafon 17
 T561 Tenor Sax 8
 T562 Twin Bones 7
 T563 Chorus Guitar. 6
 T564 Shanai 7
 T565 Kalimba 11
 T566 Jungle Bass 6
 T567 Attack Barafon 7
 T568 Soft Clav. 9
 T569 Tubular Bells 4
 T570 Reed Organ 4
 T571 Guitar Pinch 10
 T572 Bodhran 10

T573 Clavi 11
 T574 Viola Attack 6
 T575 Synth Harpsi. 7
 T576 Jungle Bass 7
 T577 Koto 8
 T578 Church Bells 6
 T579 Soft Accord 9
 T580 Tubular Bells 5
 T581 Bag Pipe 12
 T582 Grow Guitar 7
 T583 Mute Barafon 18
 T584 Soft Accord 10
 T585 Electoric Giutar (Clean)6
 T586 Viola Attack 7
 T587 Kawala 11
 T588 Soft Santur 7
 T589 Bright String 5
 T590 Electoric Giutar (Clean)7
 T591 Attack Barafon 8
 T592 Electric Vraphone 9
 T593 Steel Bell 10
 T594 Mute Barafon 19
 T595 Chorus Guitar. 7
 T596 Soft Clav. 10
 T597 Viola Attack 8
 T598 Church Bells 7
 T599 Soft Santur 8
 T600 Wind Organ 10
 T601 Indian Flute 11
 T602 Tsugaru 10
 T603 Dulcimer 10
 T604 Grow Guitar 8
 T605 Tubular Bells 6
 T606 Jungle Bass 8
 T607 Dulcimer 11
 T608 Organ Flute 6
 T609 Nay 10
 T610 Attack Barafon 9
 T611 English Horn 12
 T612 Suona 7
 T613 Reed Organ 5
 T614 Shamisen 8
 T615 Koto 9
 T616 Shamisen 9
 T617 Church Bells 8
 T618 Nay 11
 T619 Hard Barsoon 9
 T620 Slow Violin 7
 T621 Soft Sax 17
 T622 Grow Guitar 9
 T623 Attack Harp 2
 T624 Suona 8

T625 Nay 12
T626 Synth Harpsi. 8
T627 Didgeridoo 19
T628 Nay 13
T629 Synth Harpsi. 9
T630 Soft Sax 18
T631 Koto 10
T632 Kalimba 12
T633 Suona 9
T634 Oct Harp 6
T635 Koto 11
T636 Shanai 8
T637 Electric Giutar (Clean)8
T638 Clavi 12
T639 Attack Harp 3
T640 Attack Clav. 10
T641 Bright String 6
T642 Organ Flute 7
T643 Electric Giutar (Clean)9
T644 Kawala 12
T645 Bodhran 11
T646 Shanai 9
T647 Suona 10
T648 Synth Harpsi. 10
T649 Bari & Tenor 6
T650 Kawala 13
T651 Bari & Tenor 7
T652 Reed Horn 7
T653 Shamisen 10
T654 Soft Clav. 11
T655 Bari & Tenor 8
T656 Soft Santur 9
T657 Attack Harp 4
T658 Bright String 7
T659 Guitar Pinch 11
T660 Wind Organ 11
T661 Soft Guitar 12
T662 English Horn 13
T663 Kawala 14
T664 Grow Guitar 10
T665 Attack Harp 5
T666 Bari & Tenor 9
T667 Organ Flute 8
T668 Woodblock 10
T669 Hard Vibe 11
T670 Mute Barafon 10
T671 Tubular Bells 7
T672 Suona 11
T673 Bright String 8
T674 Hard Vibe 12
T675 Slow Violin 8
T676 Shamisen 11

T677 Tron Flute 8
T678 Attack Clav. 11
T679 Dual Horns 9
T680 Wind Organ 12
T681 Twin Bones 8
T682 Reed Organ 6
T683 Organ Flute 9
T684 Slow Violin 9
T685 Dulcimer 12
T686 Tsugaru 11
T687 Wind Organ 13
T688 Soft Santur 10
T689 Suona 12
T690 Soft Guitar 13
T691 Xylophone 8
T692 Dulcimer 13
T693 Marimba 10
T694 Soft Guitar 14
T695 Viola Attack 9
T696 Hard Vibe 13
T697 Koto 12
T698 Tenor Sax 9
T699 Kawala 15
T700 Steel Bell 11
T701 Soft Accord 11
T702 Organ Flute 10
T703 Organ Flute 11
T704 Bright String 9
T705 Soft Santur 11
T706 Hard Barsoon 10
T707 Wind Organ 14
T708 Synth Harpsi. 11
T709 Soft Sax 19
T710 Bright String 10
T711 Bright String 11
T712 Jungle Bass 9
T713 Soft Accord 12
T714 Reed Horn 8
T715 Slow Violin 10
T716 Synth Harpsi. 12
T717 Attack Harp 6
T718 Soft Santur 12
T719 Hard Barsoon 11
T720 English Horn 14
T721 Crystal 8
T722 Bari & Tenor 10
T723 Koto 13
T724 Didgeridoo 20
T725 Tenor Sax 10
T726 Bright String 12
T727 Hard Vibe 14
T728 Dual Horns 10

T729 Kawala 16
T730 Kawala 17
T731 Bag Pipe 13
T732 Electric Giutar (Clean) 10
T733 Tron Flute 9
T734 Kawala 18
T735 Tron Flute 10
T736 Tubular Bells 8
T737 Synth Harpsi. 13
T738 Soft Santur 13
T739 Tubular Bells 9
T740 Attack Barafon 10
T741 Attack Barafon 11
T742 Electric Viphraphone 10
T743 Dual Horns 11
T744 Shanai 10
T745 Bright String 13
T746 Crystal 9
T747 Clavi 13
T748 Soft Sax 20
T749 Tron Flute 11
T750 Dulcimer 14
T751 Slow Violin 11
T752 Tenor Sax 11
T753 Nay 14
T754 Soft Guitar 15
T755 Shanai 11
T756 Hard Barsoon 12
T757 Synth Harpsi. 14
T758 Soft Sax 21
T759 Suona 13
T760 Kalimba 13
T761 Suona 14
T762 Slow Violin 12
T763 Reed Organ 7
T764 Kawala 19
T765 Reed Horn 9
T766 Attack Harp 7
T767 Oct Harp 7
T768 Kalimba 14
T769 Twin Bones 9
T770 Attack Clav. 12
T771 Bari & Tenor 11
T772 Attack Harp 8
T773 English Horn 15
T774 Twin Bones 10
T775 Soft Clav. 12
T776 Tubular Bells 10
T777 Slow Violin 13
T778 Synth Harpsi. 15
T779 Guitar Pinch 12
T780 Church Bells 9

T781 Castanets 10
T782 Twin Bones 11
T783 Indian Flute 12
T784 Woodblock 11
T785 Attack Harp 9
T786 Crystal 10
T787 Mute Barafon 21
T788 Synth Harpsi. 16
T789 Reed Organ 8
T790 Steel Bell 12
T791 Chorus Guitar. 8
T792 Reed Organ 9
T793 Marimba 11
T794 Electric Viphraphone 11
T795 Soft Guitar 16
T796 Viola Attack 10
T797 Reed Organ 10
T798 Bari & Tenor 12
T799 Soft Sax 22
T800 Jazz Organ 12
T801 Soft Guitar 17
T802 Xylophone 9
T803 Xylophone 10
T804 Church Bells 10
T805 Suona 15
T806 Crystal 11
T807 Chorus Guitar. 9
T808 Crystal 12
T809 Hard Barsoon 13
T810 Castanets 11
T811 Kawala 20
T812 Nay 15
T813 Tubular Bells 11
T814 Hard Barsoon 14
T815 Barafon 8
T816 Marimba 12
T817 Soft Sax 23
T818 Attack Barafon 12
T819 Electric Viphraphone 12
T820 Wind Organ 15
T821 Attack Barafon 13
T822 Electric Viphraphone 13
T823 Soft Guitar 18
T824 Xylophone 11
T825 Tenor Sax 12
T826 Oct Harp 8
T827 Shamisen 12
T828 Reed Horn 10
T829 Marimba 13
T830 Reed Organ 11
T831 Attack Clav. 13
T832 Hard Barsoon 15

T833 Dual Horns 12
T834 Soft Clav. 13
T835 Church Bells 11
T836 Oct Harp 9
T837 Oct Harp 10
T838 Indian Flute 13
T839 Viola Attack 11
T840 Clavi 14
T841 Koto 14
T842 Soft Guitar 19
T843 Castanets 12
T844 Jazz Organ 13
T845 Bag Pipe 14
T846 Steel Bell 13
T847 Church Bells 12
T848 Guitar Pinch 13
T849 Soft Clav. 14
T850 Tubular Bells 12
T851 Grow Guitar 11
T852 Steel Bell 14
T853 Chorus Guitar. 10
T854 Crystal 13
T855 Reed Horn 11
T856 Steel Bell 15
T857 Kawala 21
T858 Attack Harp 10
T859 Oct Harp 11
T860 Kalimba 15
T861 Tubular Bells 13
T862 Electric Giutar (Clean)11
T863 Jazz Organ 14
T864 Attack Barafon 14
T865 Soft Guitar 20
T866 Soft Accord 13
T867 Synth Harpsi. 17
T868 Bodhran 12
T869 Woodblock 12
T870 Attack Harp 11
T871 Organ Flute 12
T872 Jazz Organ 15
T873 Didgeridoo 21
T874 Church Bells 13
T875 Synth Harpsi. 18
T876 Chorus Guitar. 11
T877 Organ Flute 13
T878 Shamisen 13
T879 Jungle Bass 10
T880 Shamisen 14

СПИСОК РИТМОВ

R001 50's Pop
 R002 Cool Pop
 R003 Groovy Pop
 R004 60's Vintage Pop
 R005 80's Pop
 R006 Rap Pop
 R007 Pop Rock
 R008 60's Soul
 R009 70's Soul
 R010 Funk
 R011 16 Beat Shuffle
 R012 Twist
 R013 British Pop
 R014 Hard Rock
 R015 Fusion
 R016 FunkShuffl
 R017 FusionShuffl
 R018 60's Rock
 R019 Standard Rock
 R020 Brit Rock Pop
 R021 60's Vintage Rock
 R022 Chart Rock Shfl
 R023 60's Pop Rock
 R024 RockBilly
 R025 RockBoogie
 R026 RockChaCha1
 R027 RockClassical
 R028 RockShuffle
 R029 RockPop
 R030 Pop Mambo
 R031 Latin Party Pop
 R032 Cumbia
 R033 Parranda
 R034 Carnival
 R035 Bossanova
 R036 Mambo 1
 R037 Mambo 2
 R038 Bolero
 R039 Cumbia
 R040 Latin Rock
 R041 Disco Latin
 R042 Tijuana
 R043 Reggae
 R044 70's Chart Ballad
 R045 Romantic Ballad
 R046 90's Cool Ballad
 R047 Alp Ballad1
 R048 Alp Ballad2
 R049 Slow Rock
 R050 Unplugged
 R051 Pop Ballad
 R052 Pop New Age

R053 8 Beat Modern
 R054 Country Ballad
 R055 Love Song
 R056 Modern Country Pop
 R057 Electro Pop
 R058 Acoustic Ballad
 R059 Piano Ballad
 R060 R&B Ballad
 R061 Rock Ballad
 R062 Slow & Easy
 R063 Analog Ballad
 R064 E. Ballad
 R065 70's Disco1
 R066 70's Disco2
 R067 Funky Disco
 R068 Saturday Night
 R069 Club Latin
 R070 Disco Chocolate
 R071 Disco Fox
 R072 Disco Funk
 R073 Disco Hands
 R074 Disco Party
 R075 Disco Samba
 R076 UK Pop
 R077 Club Dance
 R078 Modern R&B
 R079 Hip Shuffle
 R080 Charleston
 R081 DiscoPop
 R082 DiscoSoul
 R083 DiscoTrot
 R084 EuroBeat
 R085 Rap
 R086 Rave
 R087 Swing Fox1
 R088 Slow Fox1
 R089 Organ Cha Cha1
 R090 Organ Quick Step1
 R091 Fast Band 1
 R092 Cat Groove1
 R093 Dixie Jazz1
 R094 Medium Jazz1
 R095 Jazz Big Band1
 R096 Jazz Club1
 R097 Ragtime1
 R098 Country Ballad1
 R099 Country Two Step1
 R100 Schlager Polka1
 R101 Polka Pop1
 R102 Blue Grass 1
 R103 Blue Grass 2
 R104 Blue Grass 3

R105 Pop Waltz1
 R106 USA March1
 R107 Hully Gully1
 R108 Tarantella1
 R109 Limbo Rock1
 R110 Swing Waltz1
 R111 Pub Piano1
 R112 Jazz Waltz 1
 R113 Jazz Waltz 2
 R114 Show Tune1
 R115 Polka1
 R116 Waltz1
 R117 Cha Cha1
 R118 Rumba1
 R119 Jive1
 R120 Pasodoble1
 R121 Samba 1
 R122 Samba 2
 R123 Schlager Rock 1
 R124 Schlager Rock 2
 R125 FoxTrot1
 R126 Viennese Waltz1
 R127 Tango1
 R128 Tango2
 R129 70's Disco Funk
 R130 Disco Philly1
 R131 Disco House1
 R132 80's Disco
 R133 Swing Fox2
 R134 Slow Fox2
 R135 Organ Cha Cha2
 R136 Organ Quick Step2
 R137 Cat Groove2
 R138 Dixie Jazz2
 R139 Medium Jazz2
 R140 Jazz Big Band2
 R141 Jazz Club2
 R142 Ragtime2
 R143 Big Band Shuffle 1
 R144 Big Band Shuffle 2
 R145 Big Band Shuffle 3
 R146 Fast Band 2
 R147 Fast Band 3
 R148 Frankly Soul
 R149 Jazz Funk
 R150 Classic Big Band
 R151 French Jazz1
 R152 Jump Jive
 R153 Country Ballad2
 R154 Country Two Step2
 R155 Country 1
 R156 Country 2

R157 Finger Pickin1
 R158 Country Brothers1
 R159 New Country
 R160 Easy Country1
 R161 70's Chart Cntry1
 R162 Hoedown
 R163 Country Shuffle
 R164 Schlager Polka2
 R165 Polka Pop2
 R166 Blue Grass 4
 R167 Blue Grass 5
 R168 Blue Grass 6
 R169 Pop Waltz2
 R170 USA March2
 R171 Hully Gully2
 R172 Tarantella2
 R173 Limbo Rock2
 R174 Swing Waltz2
 R175 Pub Piano2
 R176 Jazz Waltz 1
 R177 Jazz Waltz 2
 R178 Show Tune2
 R179 Polka2
 R180 Ober Polka1
 R181 Party Polka
 R182 Waltz2
 R183 Cha Cha2
 R184 Rumba2
 R185 Jive2
 R186 Pasodoble2
 R187 Samba3
 R188 Samba4
 R189 Schlager Rock 3
 R190 Schlager Rock 4
 R191 Fox Trot2
 R192 Viennese Waltz2
 R193 Tango3
 R194 Tango4
 R195 German Waltz
 R196 Carnival
 R197 Organ Samba1
 R198 Reel1
 R199 Gay Gordons1
 R200 Scand Waltz
 R201 Pop Classics
 R202 Live 8 Beat
 R203 Power Rock
 R204 Acoustic Rock
 R205 Cool 8 Beat
 R206 Uptempo 8Beat
 R207 90's Rock Ballad
 R208 Chart Rock Shfl

R209 Brit Pop
 R210 Brazilian Samba
 R211 Brit Pop Swing
 R212 60's 8 Beat
 R213 Fast Bossa
 R214 60's Guitar Pop
 R215 70's 8 Beat
 R216 90's Guitar Pop
 R217 Soft Rock
 R218 Chart Guita rPop
 R219 Gujjira
 R220 Modern Pop Bld
 R221 Soul R&B
 R222 R&B Soul Ballad
 R223 Euro Hip Hop
 R224 Trip Hop
 R225 Ibiza 2004
 R226 Mod Big Band Shfl
 R227 Modern Big Band
 R228 Pop Gtr Ballad
 R229 Ibiza 2002
 R230 Euro Trance
 R231 6-8 Trance
 R232 Latin DJ's
 R233 Bomba
 R234 Chillout Cafe
 R235 70's Glam Piano
 R236 French House
 R237 English Waltz
 R238 8 Beat Ballad1
 R239 Club House
 R240 House
 R241 Jazz Gtr Club
 R242 Modern Jazz
 R243 Acoustic Jazz
 R244 Cool Jazz Ballad
 R245 Modern Jazz Bld
 R246 Easy Listening
 R247 Bebop
 R248 Orch Big Band1
 R249 Big Band Fast1
 R250 Orchestra Swing1
 R251 Orchestra Swing2
 R252 Rock Cha Cha2
 R253 Organ Swing
 R254 Secret Service
 R255 Animation Bld
 R256 Christmas Waltz
 R257 Movie Swing
 R258 Movie Ballad
 R259 Bubblegum Pop
 R260 Rock Shuffle

R261 West Coast Pop
 R262 Classic 16 Beat
 R263 Jazz Pop
 R264 Kool Shuffle
 R265 8 Beat Ballad2
 R266 Chillout
 R267 16 Beat Ballad1
 R268 Epic Ballad
 R269 Easy Ballad
 R270 Cuban Son
 R271 Bachata
 R272 Forro
 R273 J-Pop Hit
 R274 16 Beat Ballad2
 R275 70's Pop Ballad
 R276 EP Ballad
 R277 Power Ballad
 R278 Guitar Ballad
 R279 New R&B Ballad
 R280 Guitar Serenade
 R281 Organ Ballad
 R282 Joropo
 R283 Reggaeton
 R284 French Waltz
 R285 Merengue
 R286 12-8 Ballad
 R287 Norteno
 R288 Jig
 R289 Hawaiian
 R290 Electronica
 R291 Funky House
 R292 Club Beat
 R293 Retro Club
 R294 Mod Chart Pop
 R295 MOR Swing
 R296 Retro Pop
 R297 Rumba Flamenco
 R298 Trance Pop
 R299 Orch Big Band2
 R300 Big Band Fast2
 R301 Midnight Swing
 R302 70's Chart Cntry
 R303 Jazz Waltz Med
 R304 Mariachi Waltz
 R305 US March
 R306 Guitar Rumba
 R307 Slow Blues
 R308 Jazz Waltz Fast
 R309 70's Country Pop
 R310 Dixieland
 R311 40's Big Band
 R312 Easy Country2

R313 Country Hits
R314 Country 8 Beat
R315 Sci-fi March
R316 Tap Dance Swing
R317 Orchestral Bolero
R318 Gospel Sisters
R319 Italian Waltz
R320 6-8 March
R321 Bluegrass
R322 Mod Cntry Bld1
R323 Scand Country1
R324 Scand Country2
R325 Scand Shuffle
R326 Worship Slow
R327 Disco Teens
R328 Scand Bugg
R329 Schlager Samba1
R330 Schlager Samba2
R331 Scand Slow Rock
R332 Schlager 6-8
R333 Schlager Fox
R334 Highland Waltz
R335 Italian Polka
R336 Gruperas
R337 Danzon
R338 Schlager Alp
R339 Saeidy
R340 Bhajan
R341 Hip Hop Groove
R342 Chart Pop1
R343 Organ Groove
R344 Chart Pop2
R345 New R&B
R346 Pop R&B
R347 Chart R&B
R348 Modern Shuffle
R349 Blues Rock
R350 Dream Dance
R351 US Chart Hit
R352 German Rock
R353 Schlager Beat
R354 Mellow Hip Hop
R355 Classic Hip Hop
R356 New Hip Hop
R357 Duranguense
R358 Laff
R359 Ober Walzer
R360 Bhangra
R361 Zouk
R362 German March
R363 Enka
R364 Bolero Lento

R365 Sherif fReggae
R366 Beguine
R367 Latin Disco
R368 Tango5
R369 Tango6
R370 Rock &Roll
R371 Rock & Roll Shfl
R372 Oldies R & R
R373 Detroit Pop1
R374 Detroit Pop2
R375 Worship Med
R376 Worship Fast
R377 Piano Boogie
R378 Lovely Shuffle
R379 60's Rock & Roll
R380 Kool Funk
R381 Blueberry Blues
R382 Shuffle Blues
R383 Mambo 3
R384 Mambo 4
R385 Soul
R386 Skiffle
R387 6-8Soul
R388 Soul Brothers
R389 Happy Reggae
R390 Pop Latin
R391 6-8Slow Rock
R392 6-8 Modern
R393 6-8 Orchestral
R394 Schlager Shuffle
R395 Schlager Pop
R396 Schlager Rumba
R397 Euro Pop Organ
R398 70's French Hit
R399 Italian Mazurka
R400 Bohemian Waltz
R401 Club Pop3
R402 Schlager Italia2
R403 Power Rock2
R404 Rock'n Roll 3
R405 Cool8 Beat2
R406 British Pop3
R407 British Pop4
R408 8 Beat Soul3
R409 Brit Pop2
R410 Disco Latin2
R411 Brit Pop Swing2
R412 Fast Gospel2
R413 Fast Bossa2
R414 60's Guitar Pop2
R415 90's Soul
R416 Funk Shuffl 3

R417 8 Beat Rock3
R418 Rock Cha Cha3
R419 Gujira2
R420 Rock Ballad2
R421 Alp Ballad3
R422 8 Beat Modern2
R423 Euro Hip Hop2
R424 Disco Pop2
R425 Disco Philly2
R426 Mod Big BandShfl2
R427 Modern Big Band2
R428 8 Beat Adria2
R429 Disco Chocolate2
R430 Euro Trance2
R431 Euro Beat2
R432 Techno3
R433 Reggae2
R434 Chillout Cafe2
R435 Love Song2
R436 French House2
R437 Jazz Waltz3
R438 Classic Piano2
R439 Disco Party2
R440 Club Dance2
R441 Jazz Gtr Club2
R442 Modern Jazz2
R443 Polka Pop3
R444 USA March3
R445 Ober Polka2
R446 Easy Listening2
R447 Fast Band4
R448 Fast Band5
R449 Big Band Fast3
R450 Orchestra Swing3
R451 Orchestra Swing4
R452 Rock Cha Cha4
R453 Schlager Rock5
R454 Organ Samba2
R455 Gay Gordons2
R456 Swing Waltz3
R457 Reel2
R458 Movie Ballad2
R459 Cool Pop2
R460 Rock Shuffle2
R461 Hard Rock3
R462 Hard Rock4
R463 Club Pop4
R464 8 Beat Pop3
R465 8 Beat Pop4
R466 60's RockN2
R467 16 Beat Ballad3
R468 Straight Rock2

R469 Easy Ballad2
R470 Pop Mambo2
R471 Bossanova2
R472 Forro2
R473 Standard Rock2
R474 16 Beat Ballad3
R475 Contemp Rock2
R476 EP Ballad2
R477 Fusion3
R478 Fusion4
R479 Funk2
R480 Guitar Serenade2
R481 Organ Ballad2
R482 Joropo2
R483 Reggaeton2
R484 French Waltz2
R485 Merengue2
R486 Pop Ballad2
R487 Norteno2
R488 Jig2
R489 Hawaiian2
R490 70's Disco3
R491 70's Disco4
R492 Club Beat2
R493 Rap2
R494 Disco House2
R495 MOR Swing2
R496 Retro Pop2
R497 Calypso2
R498 Trance Pop2
R499 Big Band Shuffle4
R500 Big Band Shuffle5
R501 Big Band Shuffle6
R502 Finger Pickin2
R503 Hully Gully3
R504 Viennese Waltz3
R505 Show Tune3
R506 Rumba3
R507 Schlager Rock4
R508 Jazz Waltz Fast2
R509 Country Ballad3
R510 Dixieland2
R511 French Jazz2
R512 Easy Country3
R513 Country Hits2
R514 Country 8 Beat2
R515 Blue Grass7
R516 Blue Grass8
R517 Blue Grass9
R518 Gospel Sisters2
R519 Italian Waltz2
R520 Limbo Rock3

R521 Bluegrass2
R522 Country Brothers2
R523 Scand Country3
R524 Scand Country4
R525 Scand Shuffle2
R526 70's Chart Cntry2
R527 Pub Piano3
R528 Polka3
R529 Samba5
R530 Samba6
R531 Jive3
R532 Fox Trot3
R533 Pasodoble3
R534 Highland Waltz2
R535 Schlager Polka3
R536 Gruperas
R537 Danzon2
R538 Schlager Alp2
R539 Saeidy2
R540 Bhajan2
R541 Hip Hop Groove2
R542 Hip Shuffle2
R543 Organ Groove2
R544 Chart Pop3
R545 Country Ballad2
R546 Romantic Ballad2
R547 Analog Ballad2
R548 Electro Pop2
R549 Blues Rock2
R550 Rave2
R551 US Chart Hit2
R552 German Rock2
R553 Schlager Beat2
R554 Disco Funk2
R555 Disco Samba2
R556 New Hip Hop2
R557 Cat Groove3
R558 Laff2
R559 Pop Waltz3
R560 Bhangra2
R561 Twist2
R562 German March2
R563 Enka2
R564 Bolero Lento2
R565 Midnight Swing2
R566 French Jazz3
R567 Latin Party Pop2
R568 Tango7
R569 Tango8
R570 Parranda2
R571 Latin Rock2
R572 Acoustic Rock2

R573 80's Pop2
R574 60's Soul2
R575 Fusion Shuffl3
R576 Fusion Shuffl4
R577 16 Beat Pop3
R578 16 Beat Pop4
R579 60's Rock & Roll2
R580 Brit Rock Pop2
R581 Blueberry Blues2
R582 Skiffle2
R583 Mambo5
R584 Mambo6
R585 Soul2
R586 Classic 8Beat2
R587 Bolero2
R588 Soul Brothers2
R589 Happy Reggae2
R590 Pop Latin2
R591 6-8Slow Rock2
R592 6-8 Modern2
R593 6-8 Orchestral2
R594 Slow Soul2
R595 Piano Ballad2
R596 Disco Trot2
R597 Disco Hands2
R598 UK Pop2
R599 Italian Mazurka2
R600 Bohemian Waltz2

Демо песни

D01 Jockey Club
 D02 Yang On A Horse To Transport Grain
 D03 Steping Higher And Higher
 D04 US Taihu Lake
 D05 Osmanthus everywhere open in August
 D06 Central government
 D07 Tathagata
 D08 Aobaoshan
 D09 Yangming Chunxiao
 D10 Jasmine
 D11 Jaunty
 D12 Good Day
 D13 Childhood
 D14 Zi ZhuTiao
 D15 Auspicious TREBLE
 D16 Trials of a long journey always intelligence
 D17 In that faraway place
 D18 Prairie Song
 D19 Look at home
 D20 On affordable
 D21 You set off to the chapeau
 D22 The Qinghai-Tibet Plateau
 D23 Same Song
 D24 Hill Road Bending 18
 D25 Farewell
 D26 Happy home
 D27 Place peach bloom
 D28 New Century
 D29 Gave me a Red Rose
 D30 Kangding Love Song
 D31 Dansolde
 D32 Beijing Tune
 D33 Yi Jian Mei
 D34 Rumanxilou
 D35 Goodbye Dabieshan
 D36 Happy Chinese New Year
 D37 Dreams Of Riverboat
 D38 The Penghu bending Grandmother
 D39 Heart-Throb
 D40 Shepherd Front
 D41 Hotel Pacific
 D42 1900's Madness
 D43 Family Restaurant
 D44 To Flush Waves Johnny
 D45 Zimbada? hand?
 D46 Paradise
 D47 Birthday
 D48 Carmen
 D49 Cavatina
 D50 Jingle Bells
 D51 Silent Night
 D52 O Christmas Santa Claus

D53 When The Saints Go Marchin In
 D54 Oh Susanna
 D55 Moon River
 D56 ABC Word
 D57 We Wish You A Merry Christmas
 D58 Six Little Ducks
 D59 Mary Had A Little Lamb
 D60 Moonlight Bay
 D61 American Beauty Rag
 D62 Crazy Arms
 D63 Before the Next TearDrop Falls
 D64 Waltz Op64 No.1 By Chopin
 D65 Piano Sonata
 D66 The Beautiful Blue Danube
 D67 The Crave
 D68 Tea for Two
 D69 Sleigh Ride
 D70 Rudolph The Red Nosed Reindeer
 D71 Santa Claus Is Coming To Town
 D72 Traumerei
 D73 Clock
 D74 Humoresque
 D75 Frohlicher Landmann
 D76 Canon
 D77 Waltz
 D78 Greensleeves
 D79 Polka
 D80 Arabesque

15: Аппликатура простых аккордов

YAMAHA Single Finger chord Table [Example]

| | M | m | 7 | m7 |
|----|---|---|---|----|
| C | | | | |
| C# | | | | |
| D | | | | |
| D# | | | | |
| E | | | | |
| F | | | | |
| F# | | | | |
| G | | | | |
| G# | | | | |
| A | | | | |
| A# | | | | |
| B | | | | |

16. Приложение 1

| Chord Type Root | M | m | 7 | m7 | dim7 | M7 | m7 ⁻⁵ | dim |
|-----------------------------------|---|---|---|----|------|----|------------------|-----|
| C | | | | | | | | |
| C [♯] /(D [♭]) | | | | | | | | |
| D | | | | | | | | |
| (D [♯])/E | | | | | | | | |
| E | | | | | | | | |
| F | | | | | | | | |
| F [♯] /(G [♭]) | | | | | | | | |
| G | | | | | | | | |
| (G [♯])/A | | | | | | | | |
| A | | | | | | | | |
| (A [♯])/B | | | | | | | | |
| B | | | | | | | | |

| Chord Type Root | aug | sus4 | 7sus4 | m add9 | mM7 | 7-5 | add9 |
|-----------------------------------|-----|------|-------|--------|-----|-----|------|
| C | | | | | | | |
| C [♯] /(D [♭]) | | | | | | | |
| D | | | | | | | |
| (D [♯])/E | | | | | | | |
| E | | | | | | | |
| F | | | | | | | |
| F [♯] /(G [♭]) | | | | | | | |
| G | | | | | | | |
| (G [♯])/A | | | | | | | |
| A | | | | | | | |
| (A [♯])/B | | | | | | | |
| B | | | | | | | |

17. Приложение 2

Соответствующая схема группы клавишных и ударных

| | | | | | | | |
|---|---|---|---|---|---|---|---|
|  A 1 |  A # 1 |  B 1 |  C 2 |  C # 2 |  D 2 |  D # 2 |  E 2 |
|  F 2 |  F # 2 |  G 2 |  G # 2 |  A 2 |  A # 2 |  B 2 |  C 3 |
|  C # 3 |  D 3 |  D # 3 |  E 3 |  F 3 |  F # 3 |  G 3 |  G # 3 |
|  A 3 |  A # 3 |  B 3 |  C 4 |  C # 4 |  D 4 |  D # 4 |  E 4 |
|  F 4 |  F # 4 |  G 4 |  G # 4 |  A 4 |  A # 4 |  B 4 |  C 5 |
|  C # 5 |  D 5 |  D # 5 |  E 5 |  F 5 |  F # 5 |  G 5 |  G # 5 |
|  A 5 |  A # 5 |  B 5 |  C 6 |  C # 6 |  D 6 |  D # 6 |  E 6 |
|  F 6 |  F # 6 |  G 6 |  G # 6 |  A 6 |  A # 6 |  B 6 |  C 7 |
|  C # 7 |  D 7 |  D # 7 |  E 7 |  F 7 |  F # 7 |  G 7 |  G # 7 |
|  A 7 |  A # 7 |  B 7 |  C 8 |  C # 8 |  D 8 |  D # 8 |  E 8 |
|  F 8 |  F # 8 |  G 8 |  G # 8 |  A 8 |  A # 8 |  B 8 |  C 9 |